




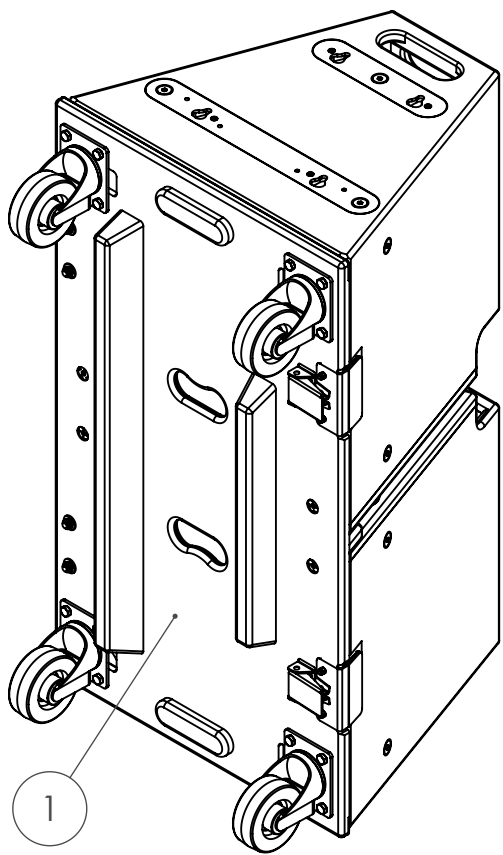

Two Evo2L with wheel board fitted.

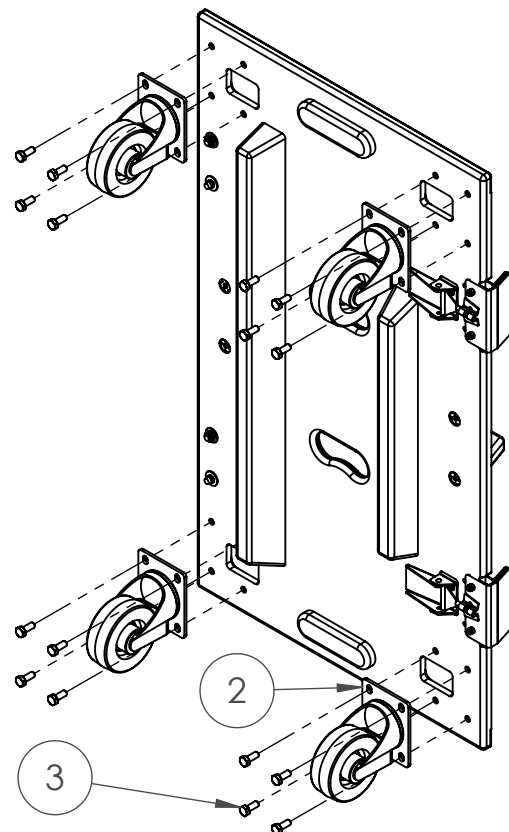


Wheel board packed without wheels fitted. Each wheel requires 4 x M8 x 20mm hex bolts (13mm). We suggest using a contact adhesive on the bolt thread to secure bolts.

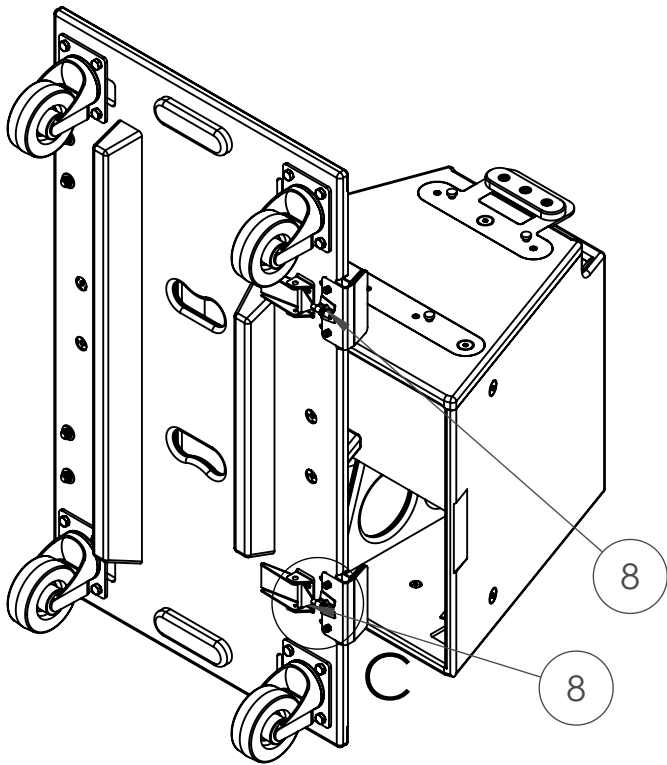


The two over centre latches clamp onto the Evo 2Ls in their side recesses. To fit wheel board, sit the lower Evo2L as above, hook onto the cabinet on the fixed clamp side first, then, with the over centre latches open, swing the board onto the front face and close the latch. Then lift the second Evo2L upside down onto the wheelboard centre brace, hooking into the fixed clamp and then swing onto the board and close the latch.

Should the latches become loose, tighten the M6 (10mm) nut.

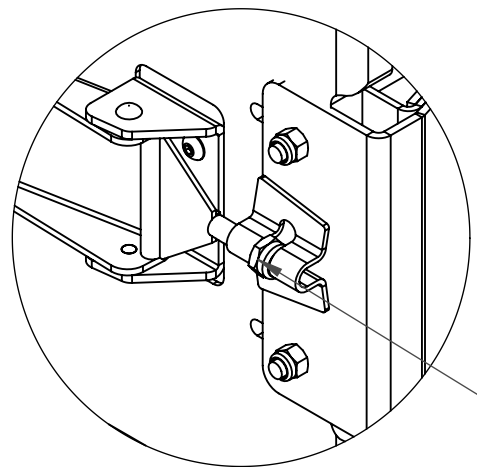

DETAIL C
SCALE 1 : 2

Adjustment nut

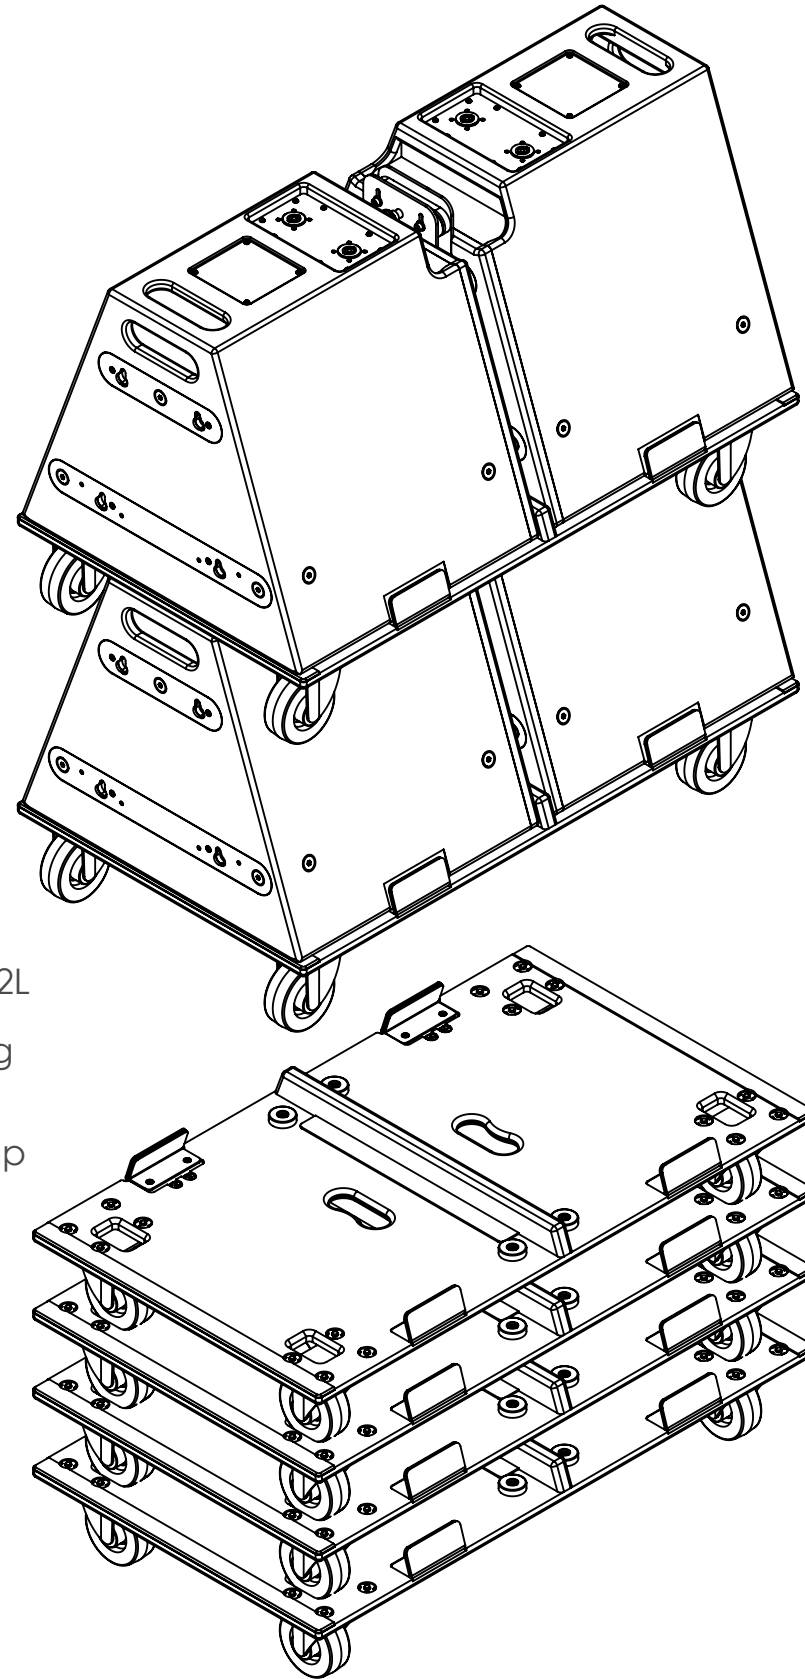

Wheel boards stack with and without loudspeakers for ease of transportation and storage.

ITEM	DESCRIPTION	QUANTITY
1	EVOLUTION 2 WHEEL BOARD	1
2	4" CASTOR WHEEL	4
3	M8 X 20mm HEX BOLT	16
8	OVER CENTR LATCH*	2

* fitted to wheel board in packaging.

Funktion-One Research LTD
Hoyle, Beare Green, Dorking, Surrey, RH5 4PS, UK
mail@funktion-one.com +44 (0)1306 712820

Sheet:Detail Drawing
Funktion-One Accessory Drawing


A3 Sheet Scale: 1:10

Filename:

Drawn By: Mike Igglesden

03/06/2026

WB-E2L-F1-AD=T0332-00

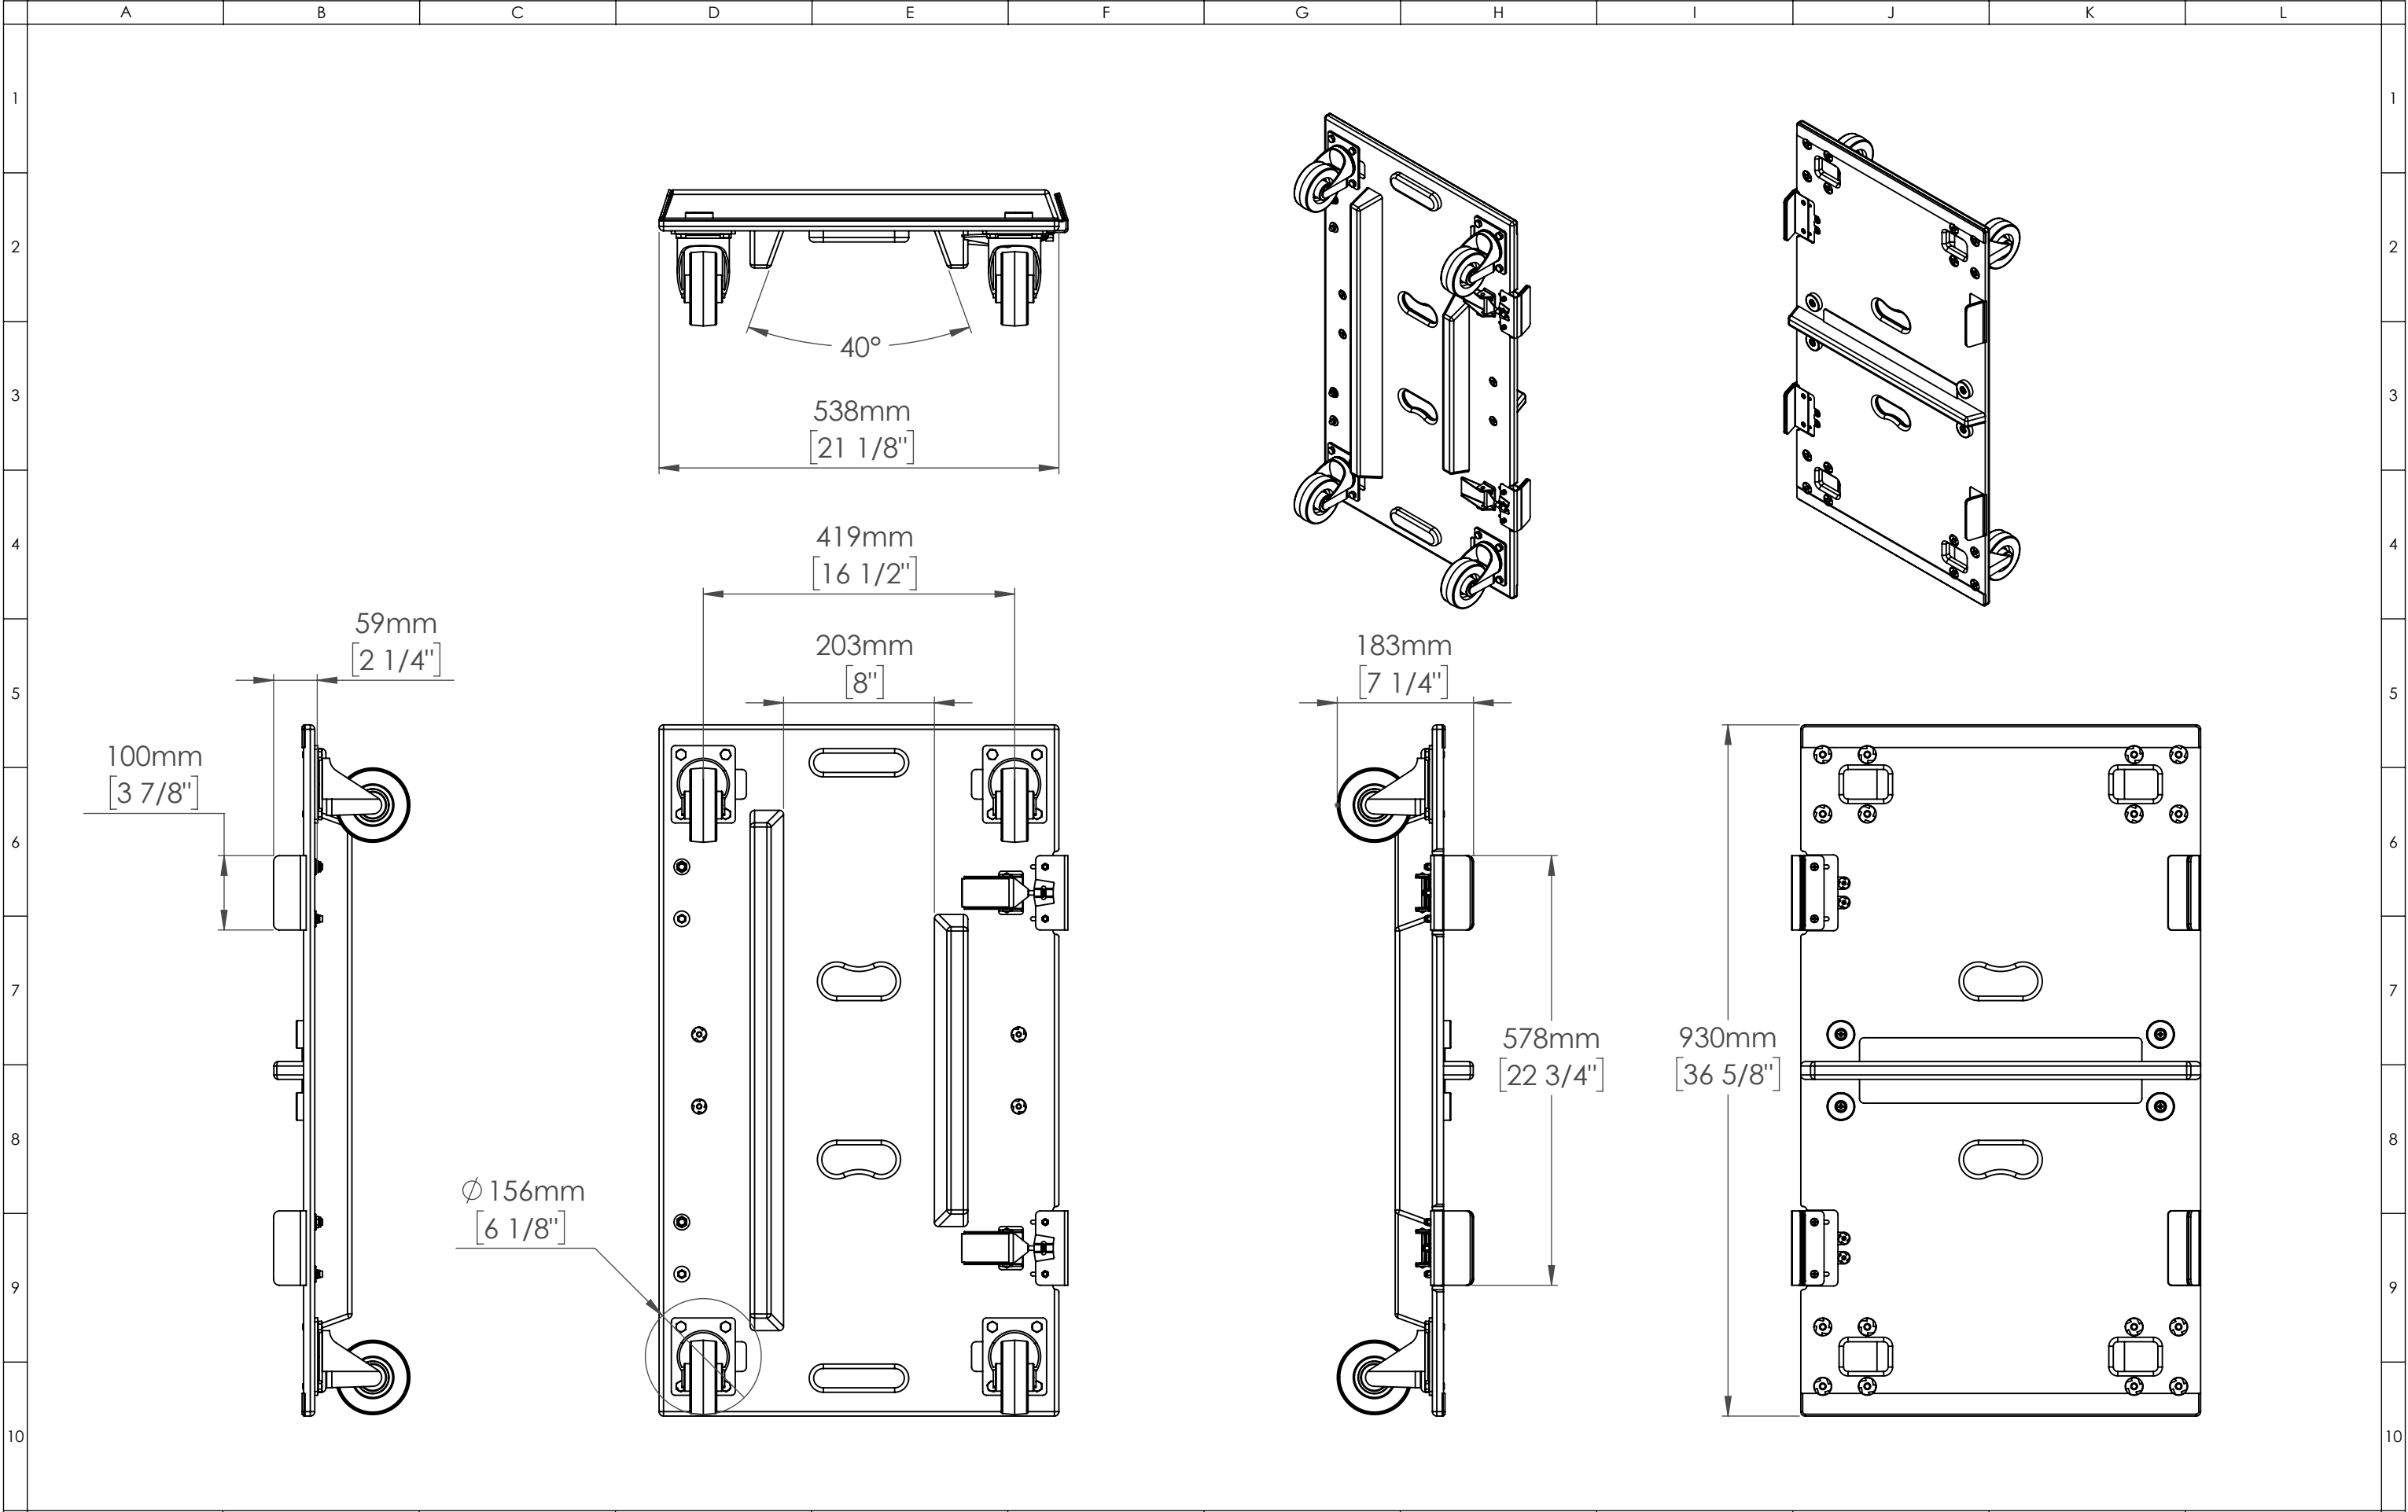

Funktion-One Research LTD
Hoyle, Beare Green, Dorking, Surrey, RH5 4PS, UK
mail@funktion-one.com +44 (0)1306 712820

Sheet: Technical Drawing
Funktion-One Accessory Drawing

A3 Sheet Scale: 1:8

Drawn By: Mike Igglesden 03/06/2026

Filename:

WB-E2L-F1-AD=T0332-00

